



Installing a chart:


Standard clockwork

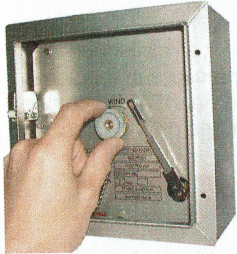


Open the recorder door and remove the knob of the clockwork by turning it clockwise.

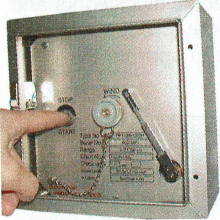


Switch the start/stop button to start.

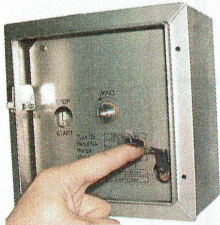

Lift the pen arm gently in a 90 degree angle.

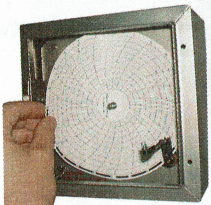

Put the recorder chart in the recorder.

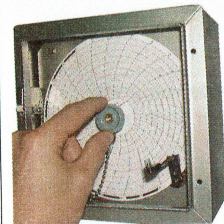

Return the knob of the clockwork by turning it anti-clockwise. **Wind up max. 5 turns!**






Optional:
Sonceboz clockwork



Set the paperclip vertical.




Set the speed with a screwdriver.

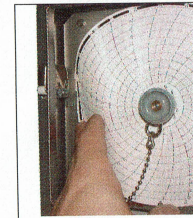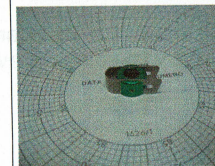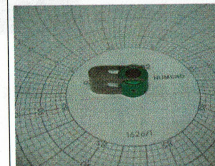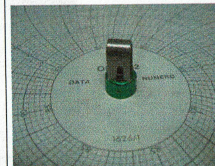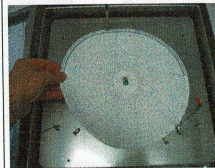

Make sure that the chart is placed under the chart clips
4x for case 192x192 mm
3 x for case 280x280 mm
4 x for case 380x380 mm
4 x for case 463x335 mm on the lower panel.



Remove the protective cover of the recorder pen.

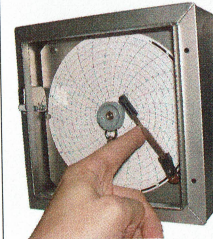

Put the pen arm back on the chart.



Changing the battery




Battery 1.5 V (LR14; "C" MN1400)



Example of disposable felt pen with protective cover



Removing the pen from the pen arm.

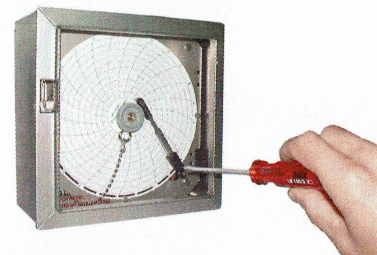

Zero-adjustment: Turn the screw gently.
At normal usage zero-adjustment is not required.